


# Wellis®

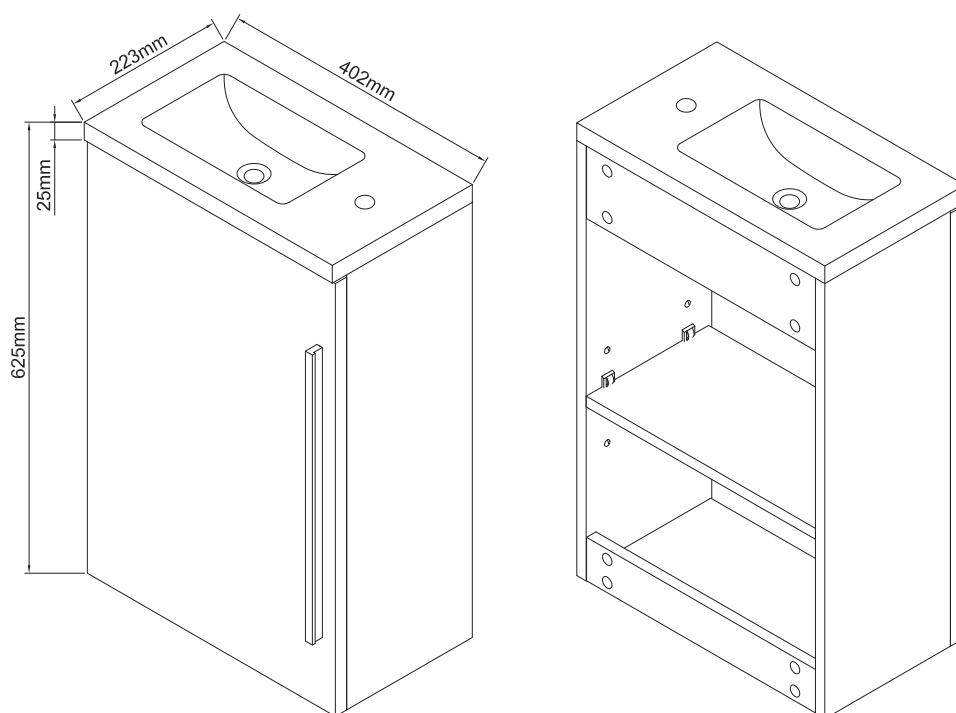


















EN



## Almeria sink cabinet INSTALLATION GUIDE

HU

## Almeria kézmosó szekrény TELEPÍTÉSI ÚTMUTATÓ

WB00349  
WB00350

$\varnothing 4 \times 14 \text{mm}$  <b>H1x12</b>	 <b>H2x16</b>	$\varnothing 8 \times 30 \text{mm}$  <b>H3x6</b>	 <b>H4x16</b>	 <b>H5x16</b>	 <b>H6x4</b>	 <b>H7x8</b>	 <b>H8x2</b>
  <b>H9x1</b>	$\varnothing 4 \times 25 \text{mm}$  <b>H10x4</b>	 <b>H11x1</b>	 <b>H12x2</b>	$\varnothing 4 \times 22 \text{mm}$  <b>H13x2</b>	$\varnothing 4.2 \times 50 \text{mm}$  <b>H14x6</b>	 <b>H15x2</b>	$\varnothing 8 \times 40 \text{mm}$  <b>H16x6</b>



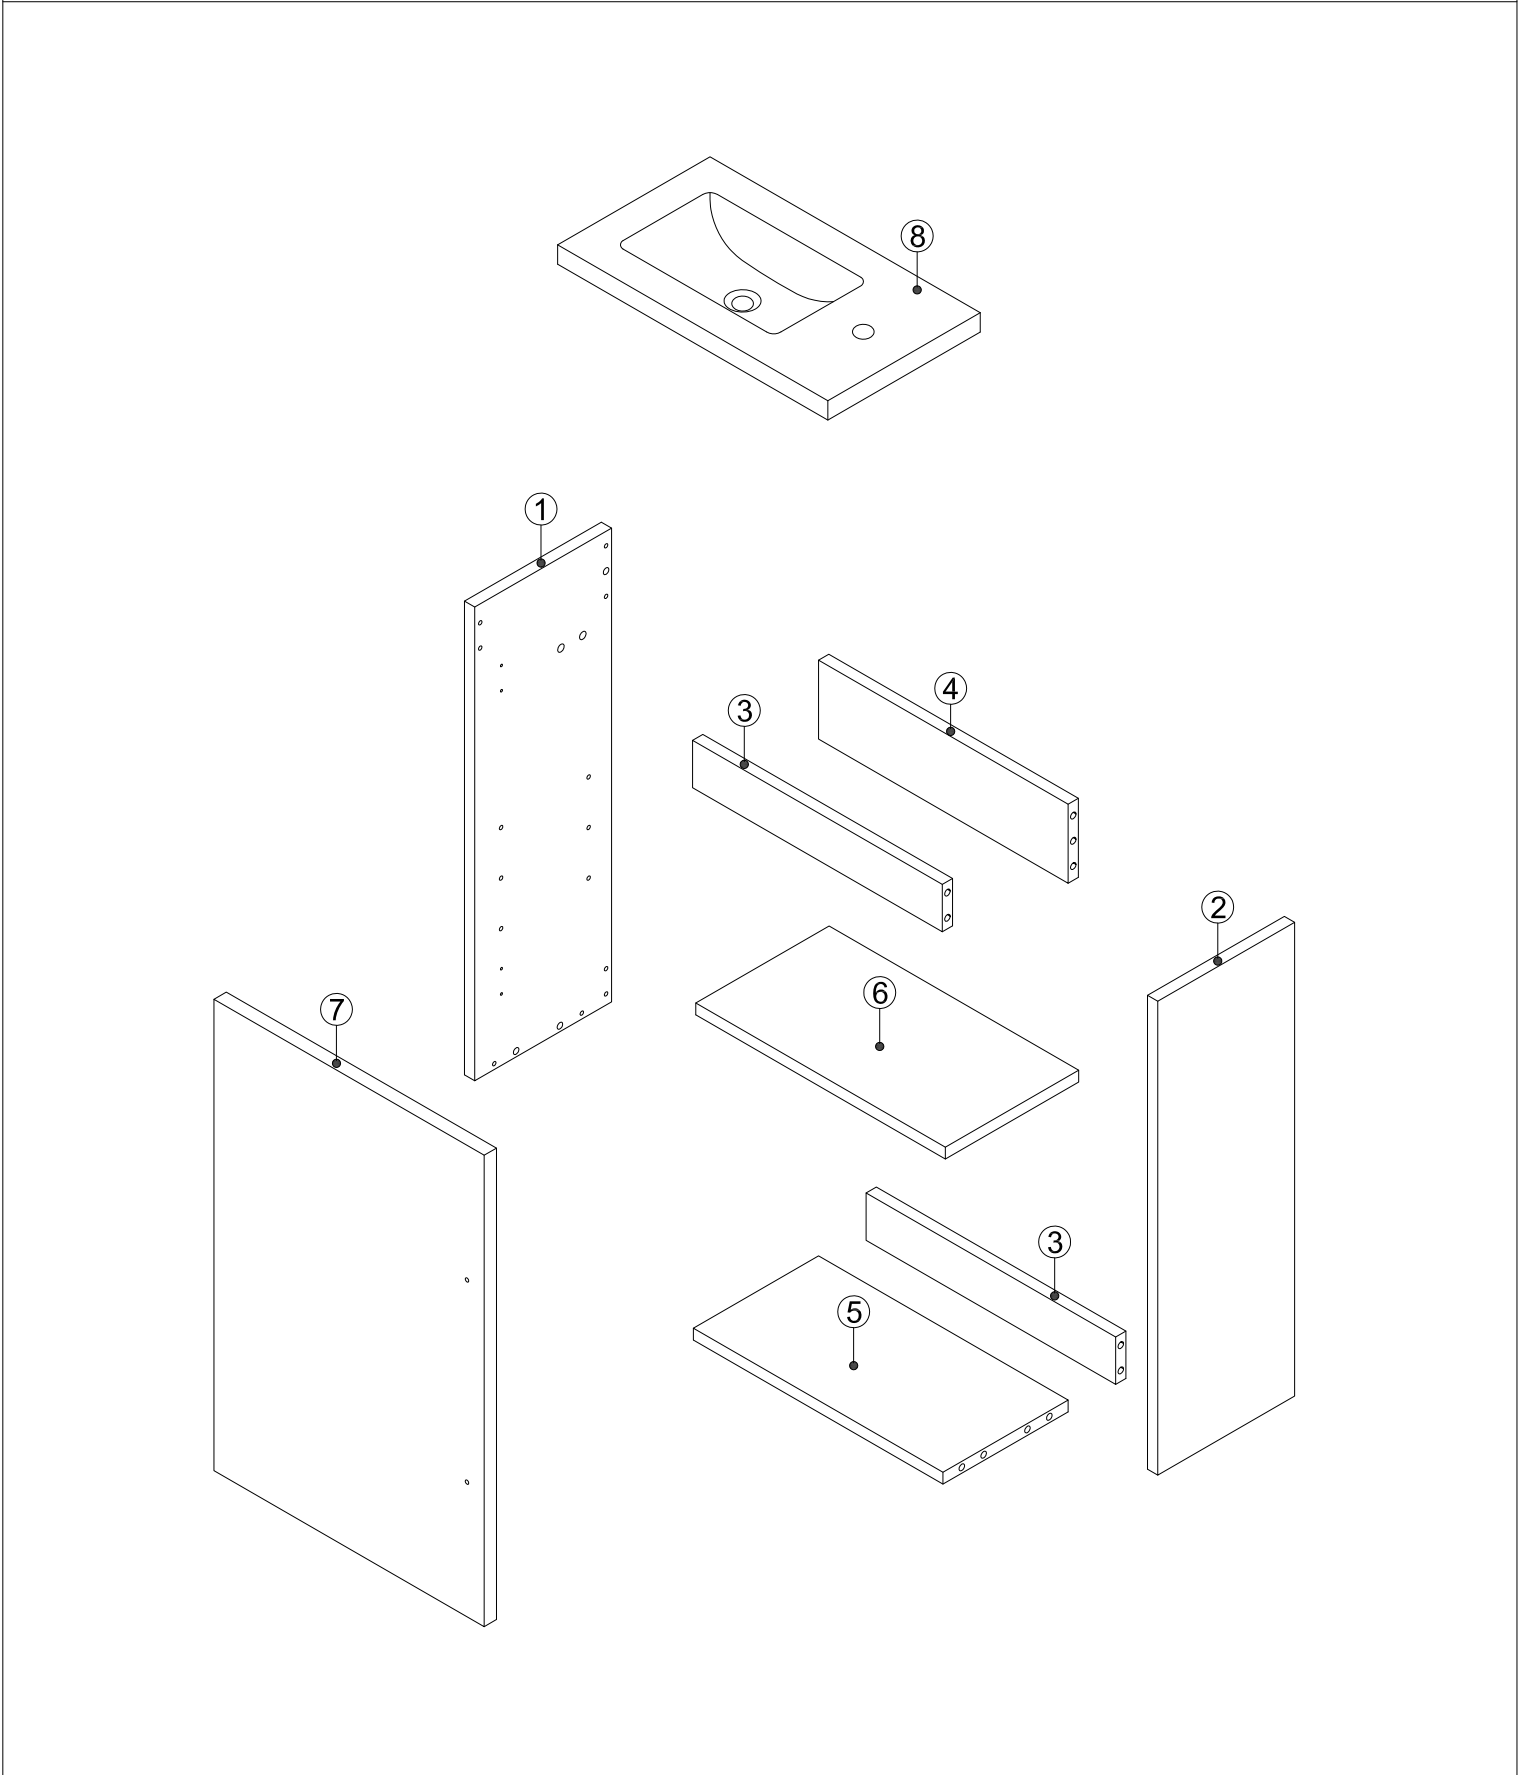
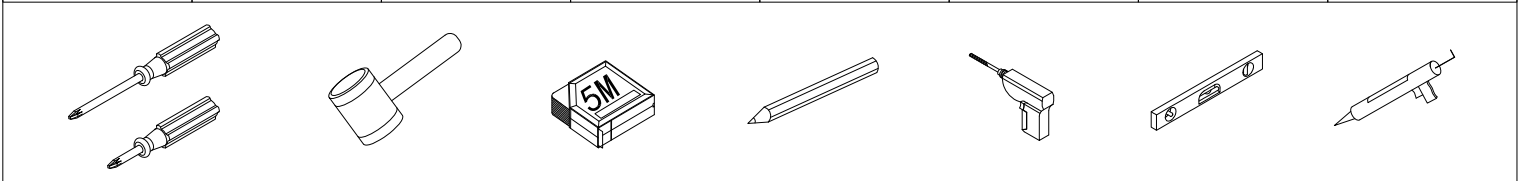


1

Ø8x30mm




H3x6

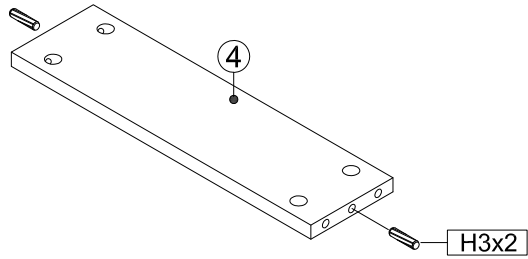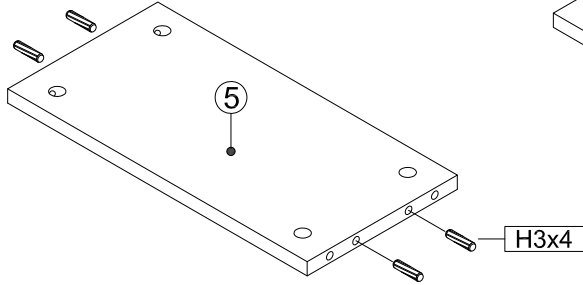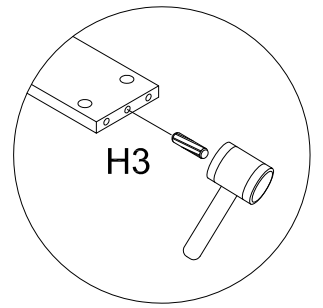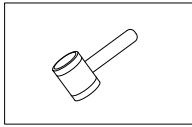

2



H2x16







H9x1

Ø4x25mm



H10x4

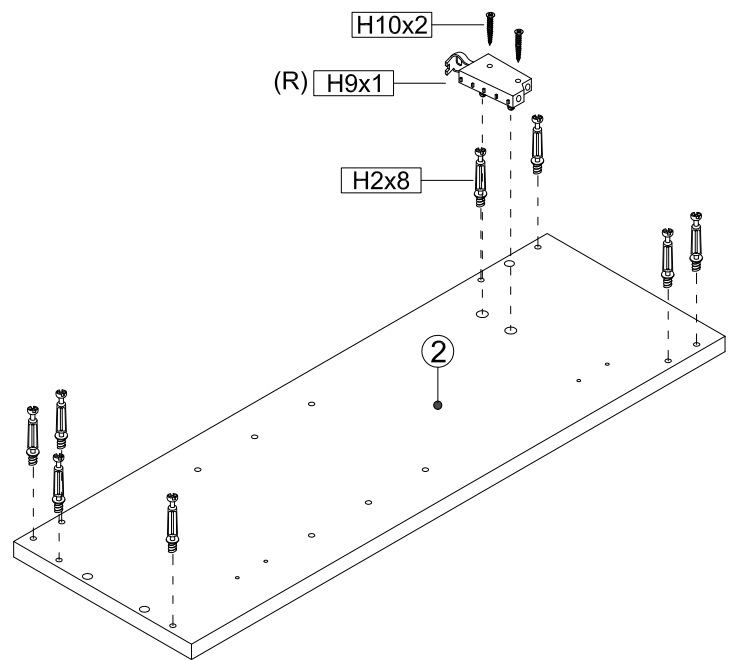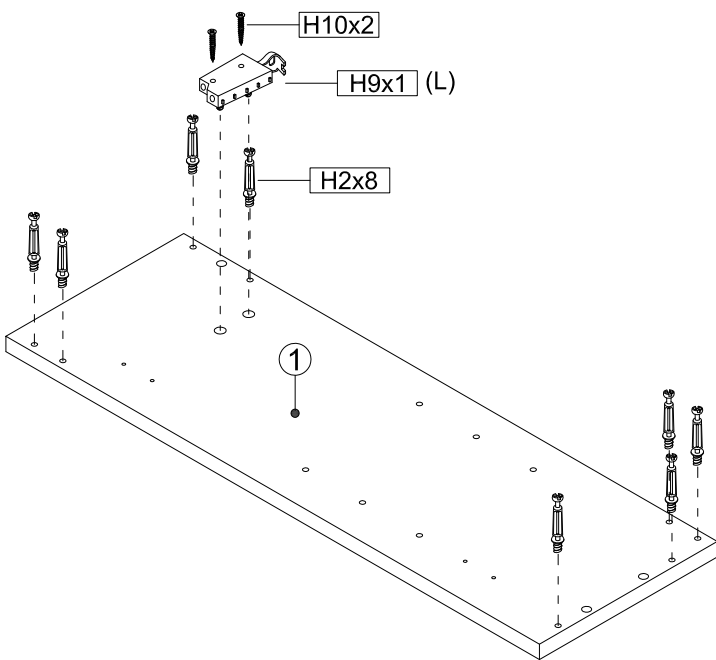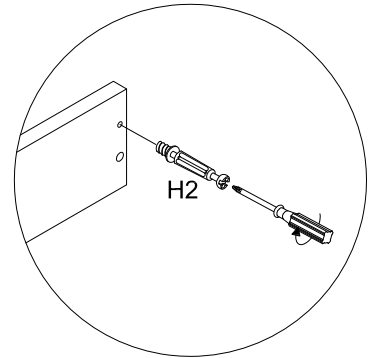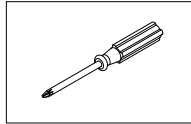








3



H4x16



H5x16

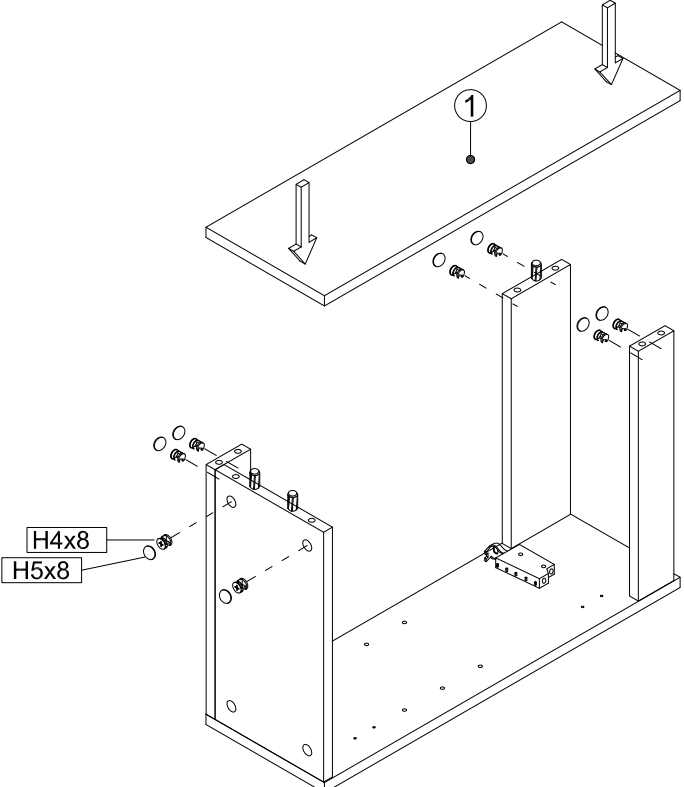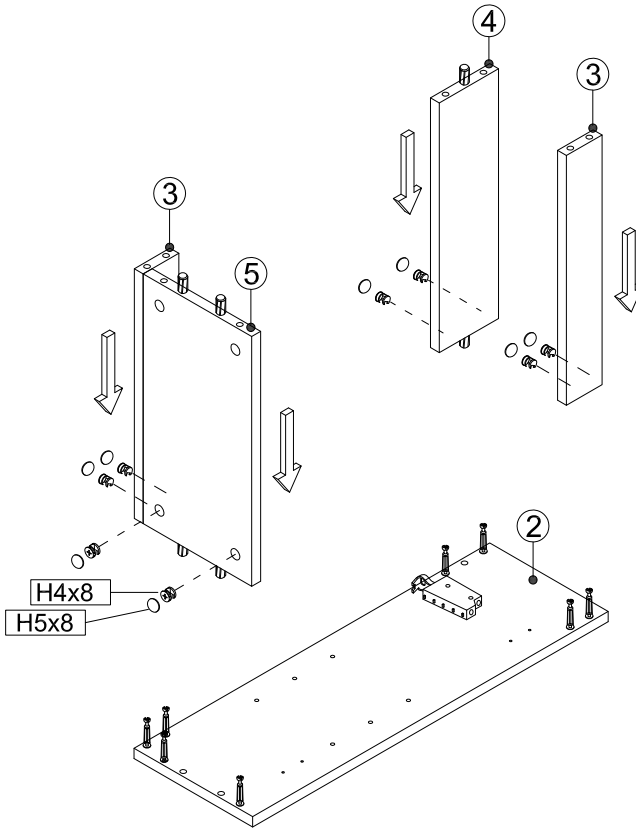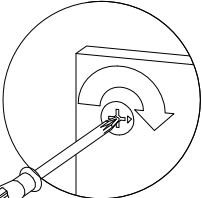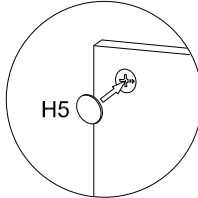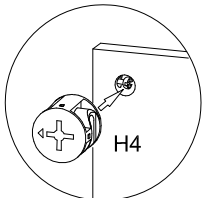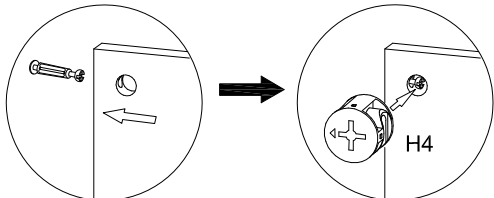

4

Ø4x14mm



H1x4



H8x2



H11x1





H12x2


Ø4x22mm



H13x2

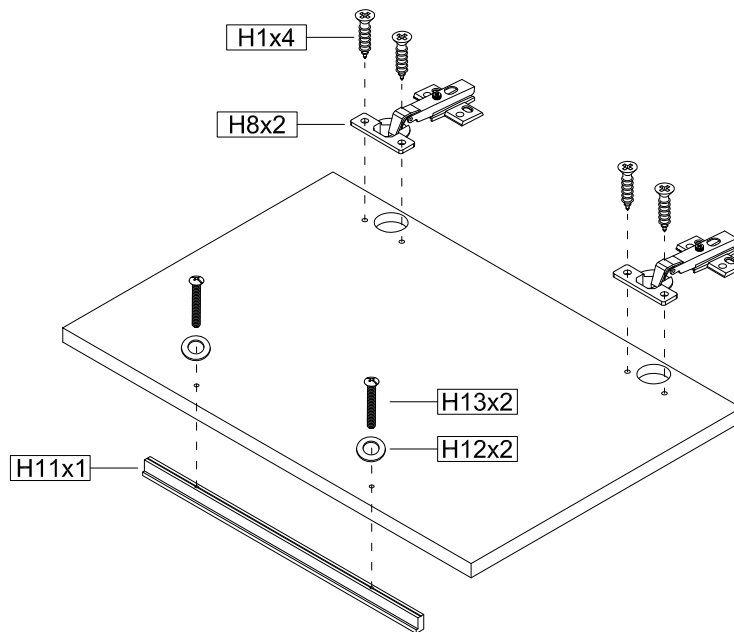



5



H6x4



H7x8

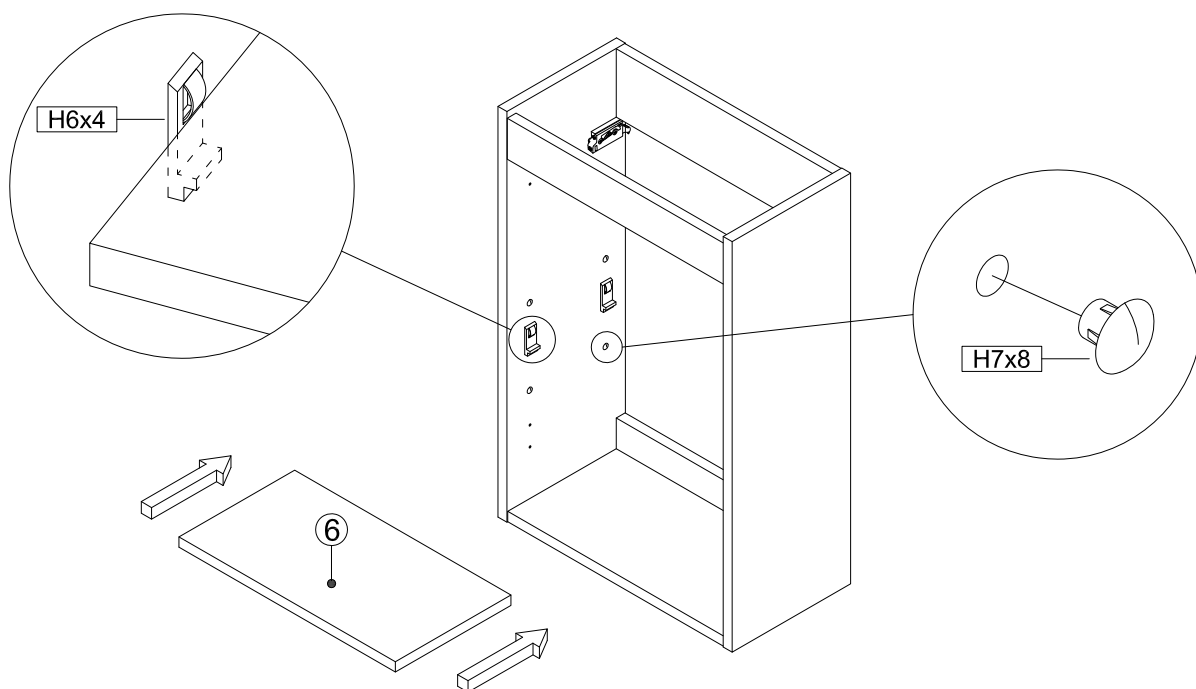



6



Ø4x14mm




H1x8

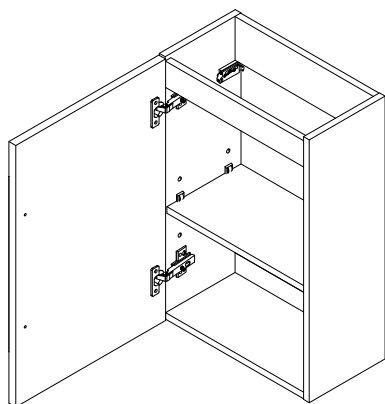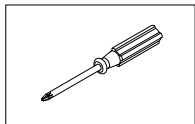


LEFT OPEN

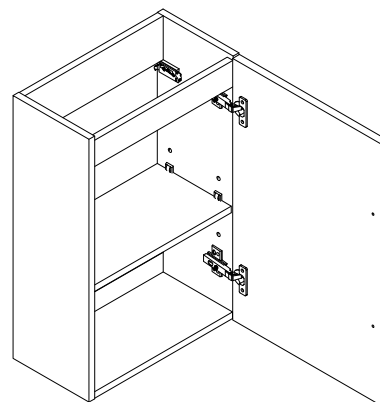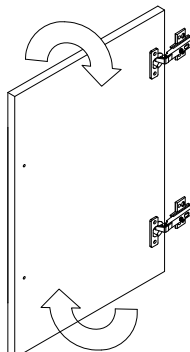


RIGHT OPEN

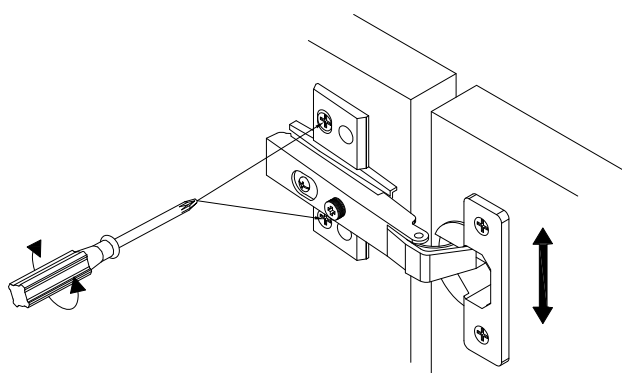


A

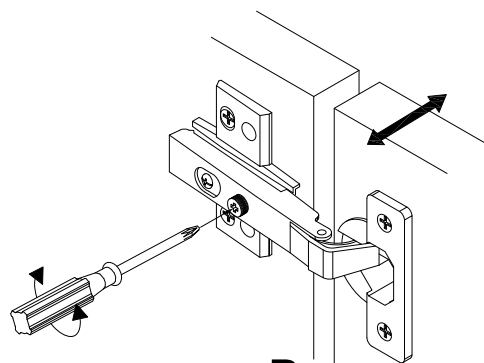

B

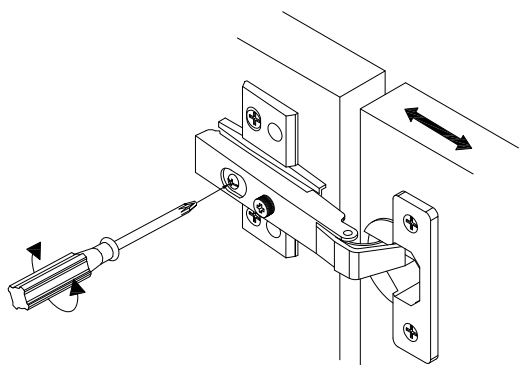

C

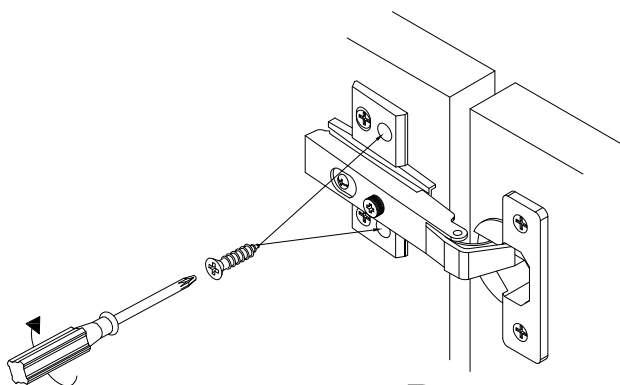

D

7

Ø4x50mm



H14x6










H15x2




Ø8x40mm




H16x6

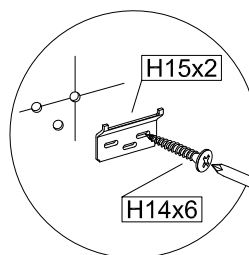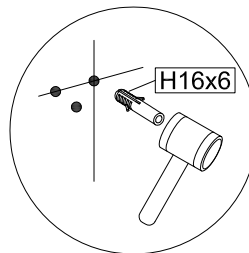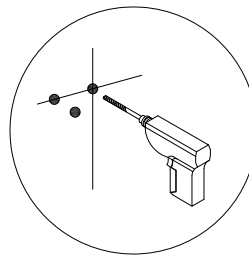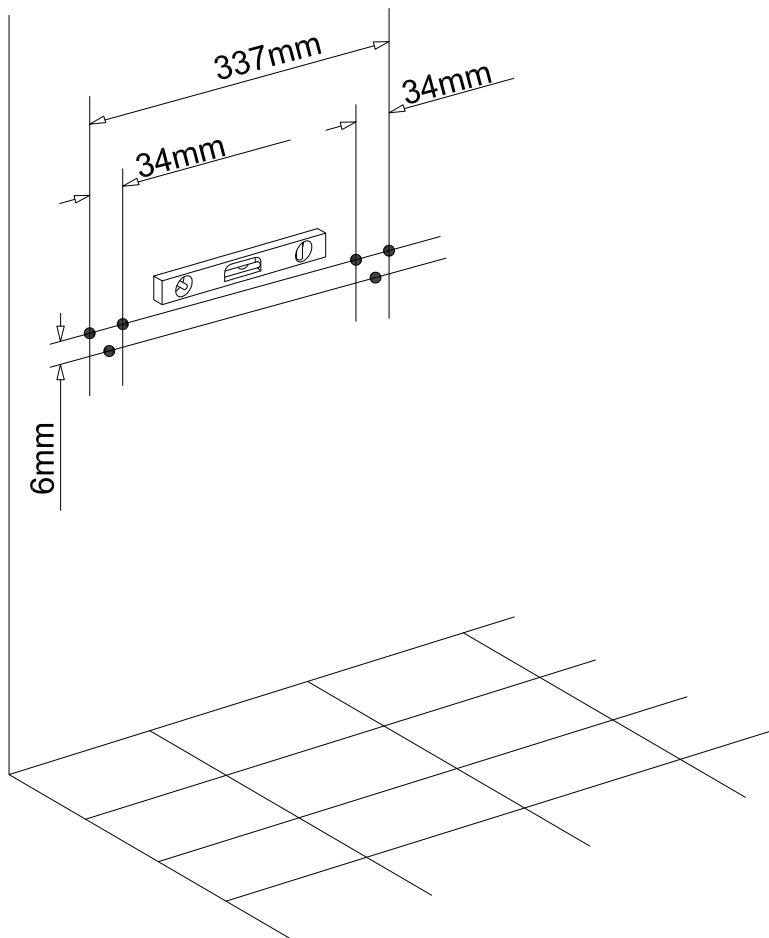

8

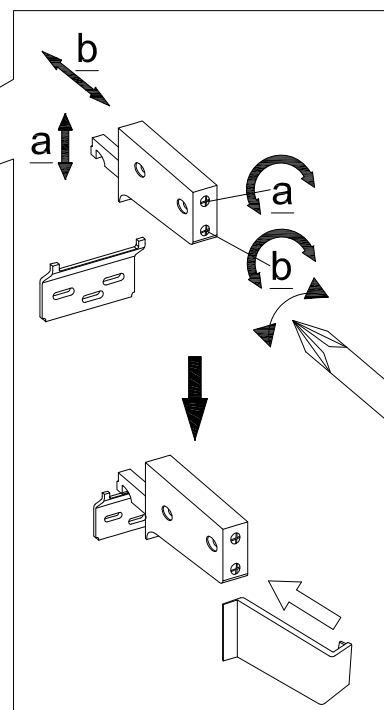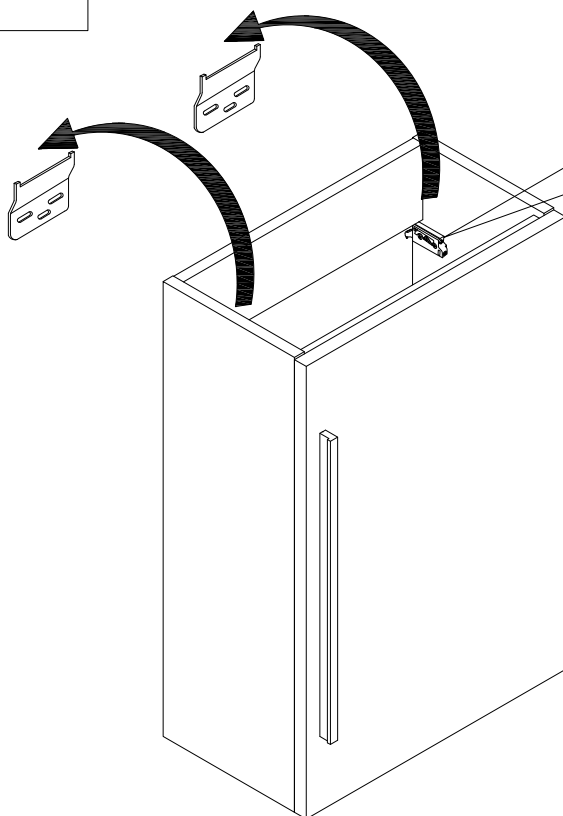

9

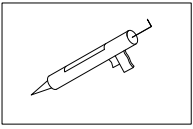

\*Drying time

